



Personal Satellite Network, Inc.

10317 Amberleigh Court, Manassas, VA. 20110-6616 703-330-9028 voice & fax 703-995-0771

Iridium™ Kyrocera™ Single and Multi-mode Phones

The old Kyrocera™ single-mode and multi-mode phones can be used on the new Iridium system. However, you should realize when buying the unit they are not supported, there are no software upgrades for data service and no parts or repairs available.

You must have a new SIM chip for the new Iridium network; an old SIMs will not work. Contact PSN and we will ship you a new SIM and the activation paperwork, you will need a credit application and Iridium Activation request to activate the SIM.

Single-Mode Phone

If you have a single-mode phone, the unit without a removable cell phone, the new Iridium™ SIM is placed into the SIM holder under the battery. Remove the battery. The SIM holder is latched, slide the latch down and rotate the holder up. Slide the SIM into the holder so the gold contacts will be down and the keyed corner is up. Rotate the SIM holder down and slide the latch back into place. Replace the battery.

Go outside at turn the unit on. You will know you have a new SIM if the unit displays the signal strength of the Iridium™ satellite. If it is an active SIM, it will begin registering on the Iridium™ network.

Dual-Mode Phone

For the dual-mode phone, the one with the removable little cell phone, you have a choice in where to place the SIM.

If you place the good SIM in the Iridium unit, follow the instructions for the single-mode phone. You must also place a SIM in the little cell phone. The SIM in the cell phone can be an old or new SIM and does not have to be active. The SIM for the cell phone is in the top of the battery compartment of the phone. If the SIM in the cell phone is a good SIM for a particular network, then you can remove the cell phone and use in that network. Please insure the frequencies for the phone match the network you wish to subscribe, US and European GSM frequencies are not the same.

You can also place the Iridium SIM into the cell phone, and place no SIM in the Iridium unit and the unit will function as an Iridium™ phone only.

Dialing

Dialing instructions are the same as from any Iridium™ unit, where you must enter 00 country code and phone number. Similarly to have someone dial your phone they must make an international call to country code 881, which is Iridium™.

SMS

Short Message Service has worked with the units we tested. To send a message to the phone, send an email to your phone number with the format 8816314NNNNN@msg.iridium.com. The first 120 characters of the Subject plus the message body will be sent to the phone. Presently, Iridium™ is not charging for SMS.